

Item No. (Figure 4)	Reorder No.	DESCRIPTION
1	42538002	Switch Assembly*
2	42538005	Lamp Assembly*
3	42538006	Right Angle Thermometer
4	42538010	Heater Assembly*
5	42538013	Feet (4/pk)
6	42538014	Inserts (5/pk)*
7	42538015	Plugs (5/pk)*
8	42538016	Top Plate*
9	42538017	PC Board Assembly*
10	42538018	Thermister PC Board*
11	42538019	Potentiometer Assembly*

*For replacement, refer to authorized service center only.

